










### Step #3

Place bed frame on top of the bed base. Align bed base between the two side rails under the bed frame and place the back of the bed base against the back edge of the bed frame. Then, using the #8 x 1-1/4" wood screws provided on the box, secure the bed base to the top frame.

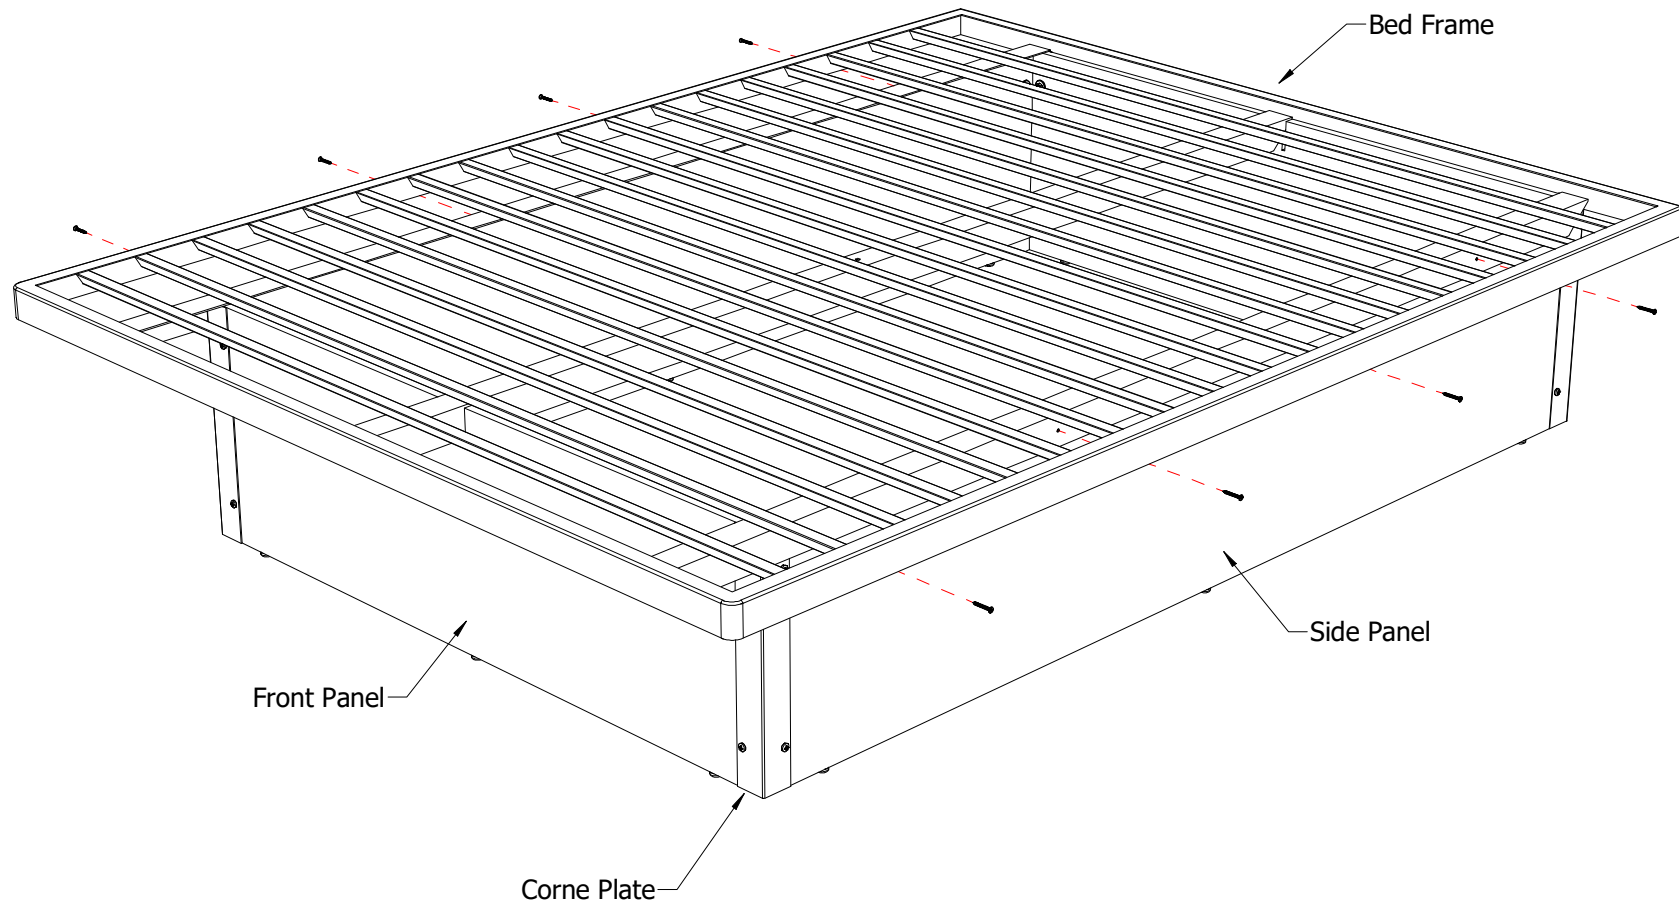

**NOTE:** If you consider this option easier, you can do this step with the bed frame upside down on the floor and placing the bed base on top of the frame and secure them with the screws provided.

**MATERIALS:**  
 - HP-Laminate PB-5/8"  
 - 0.018 Edge Tape  
 - Nail Glides  
 - Metal Bed Frame  
 - Metal Corner Brackets  
 - Metal Center Leg W/Leveler

**COMMENTS:**  
 - **Overall:**  
 - **Color:** Wilsonart - 0000 - Custom Laminate  
 Black Metal - Powder Coated Paint  
 - **Note:**

**SIZE**  
**A**

**DWG. NO.**

AHB 5700XX 5BB - 5700 - Queen Bed Base (INST).dwg

Quantity:

**00**

**Revision Date:**


**11/19/2018**

**Note:** Design and Drawings are Property of Dickson Furniture Manufacturers LLC and may not be duplicated or reproduced without the express written consent of Dickson Furniture Manufacturers LLC

Sheet:  
 5 of 6

## Step #4

Place center leg under the bed frame and secure it with the "5/16"-18" bolt provided with the leg on the hole locator in the center of the bed frame rail.

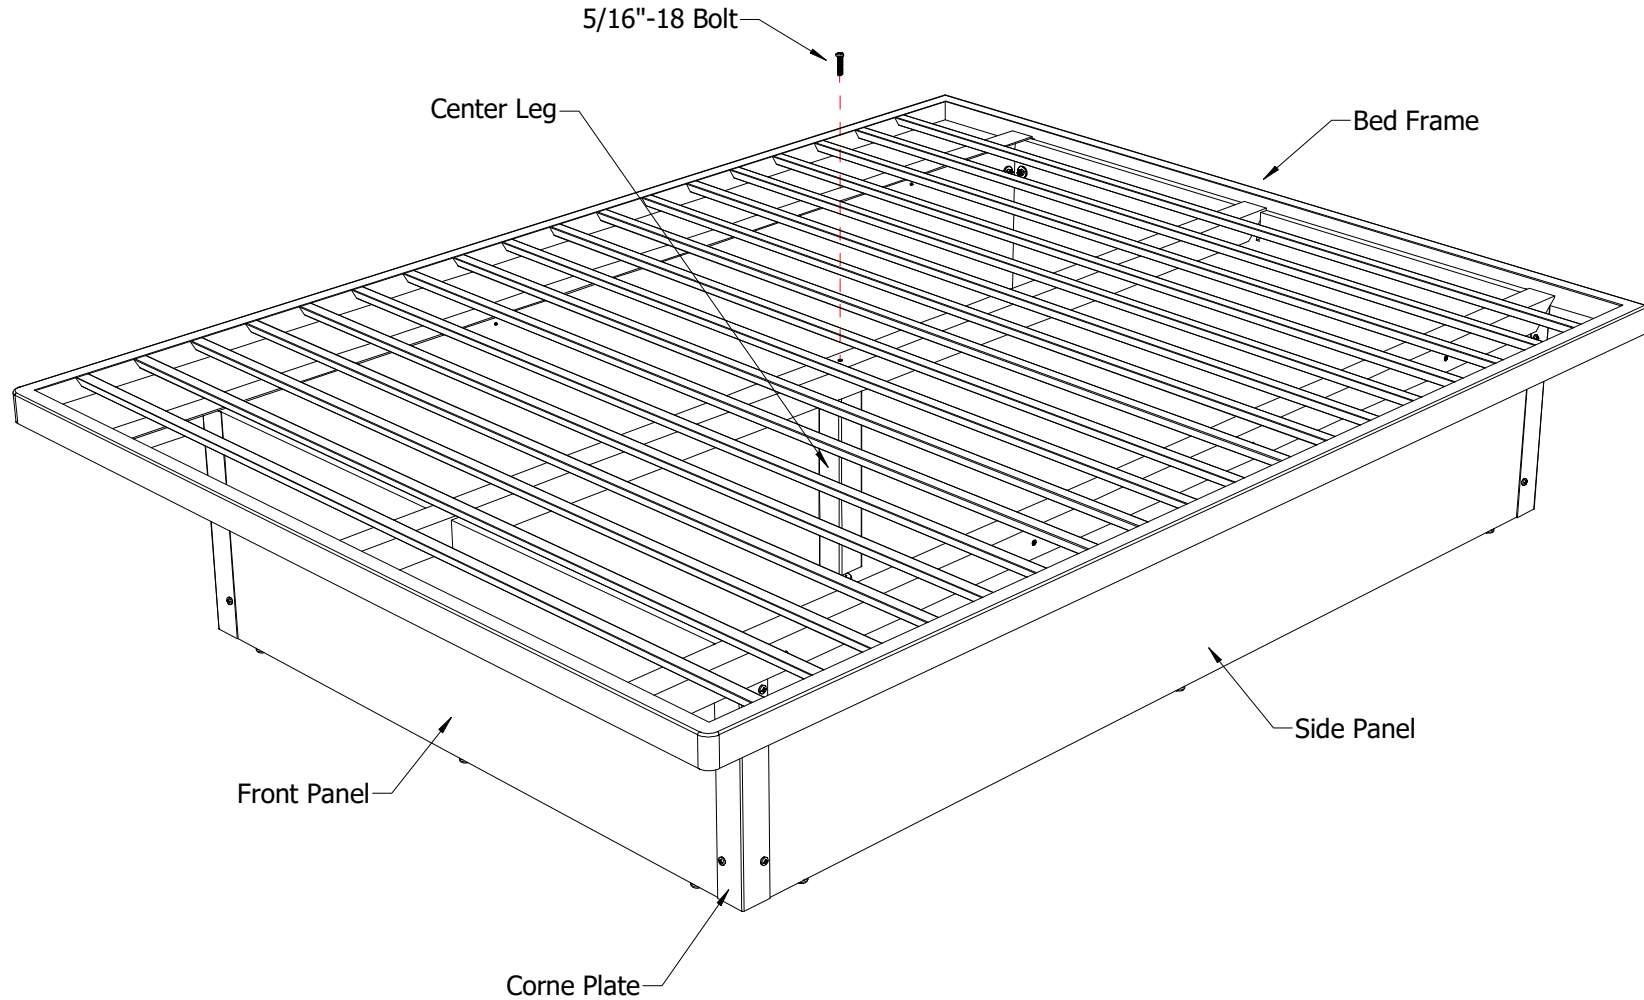

**MATERIALS:**  
 - HP-Laminate PB-5/8"  
 - 0.018 Edge Tape  
 - Nail Glides  
 - Metal Bed Frame  
 - Metal Corner Brackets  
 - Metal Center Leg W/Leveler  
 -

**COMMENTS:**  
 - **Overall:**  
 - **Color:** Wilsonart - 0000 - Custom Laminate  
 Black Metal - Powder Coated Paint  
 - **Note:**

**SIZE**  
**A**

**DWG. NO.**

AHB 5700XX 5BB - 5700 - Queen Bed Base (INST).dwg

Quantity:

**00**

**Revision Date:**

**11/19/2018**

**Note:** Design and Drawings are Property of Dickson Furniture Manufacturers LLC and may not be duplicated or reproduced without the express written consent of Dickson Furniture Manufacturers LLC

Sheet:  
 6 of 6